



- NOTES:
1. STRIP AND REMOVE ALL ASPHALT SHINGLE ROOFING MATERIALS IN AREAS AS INDICATED.
 2. INSPECT AND REPAIR WOOD ROOF DECK.
 3. INSTALL ALUMINUM DRIP EDGE.
 4. INSTALL ICE & WATERSHIELD.
 5. INSTALL SOLID FELT OR SYNTHETIC ROOF UNDERLAYMENT OVER ENTIRE ROOF DECK.
 6. INSTALL ASPHALT SHINGLES AND RIDGE CAP SHINGLES.

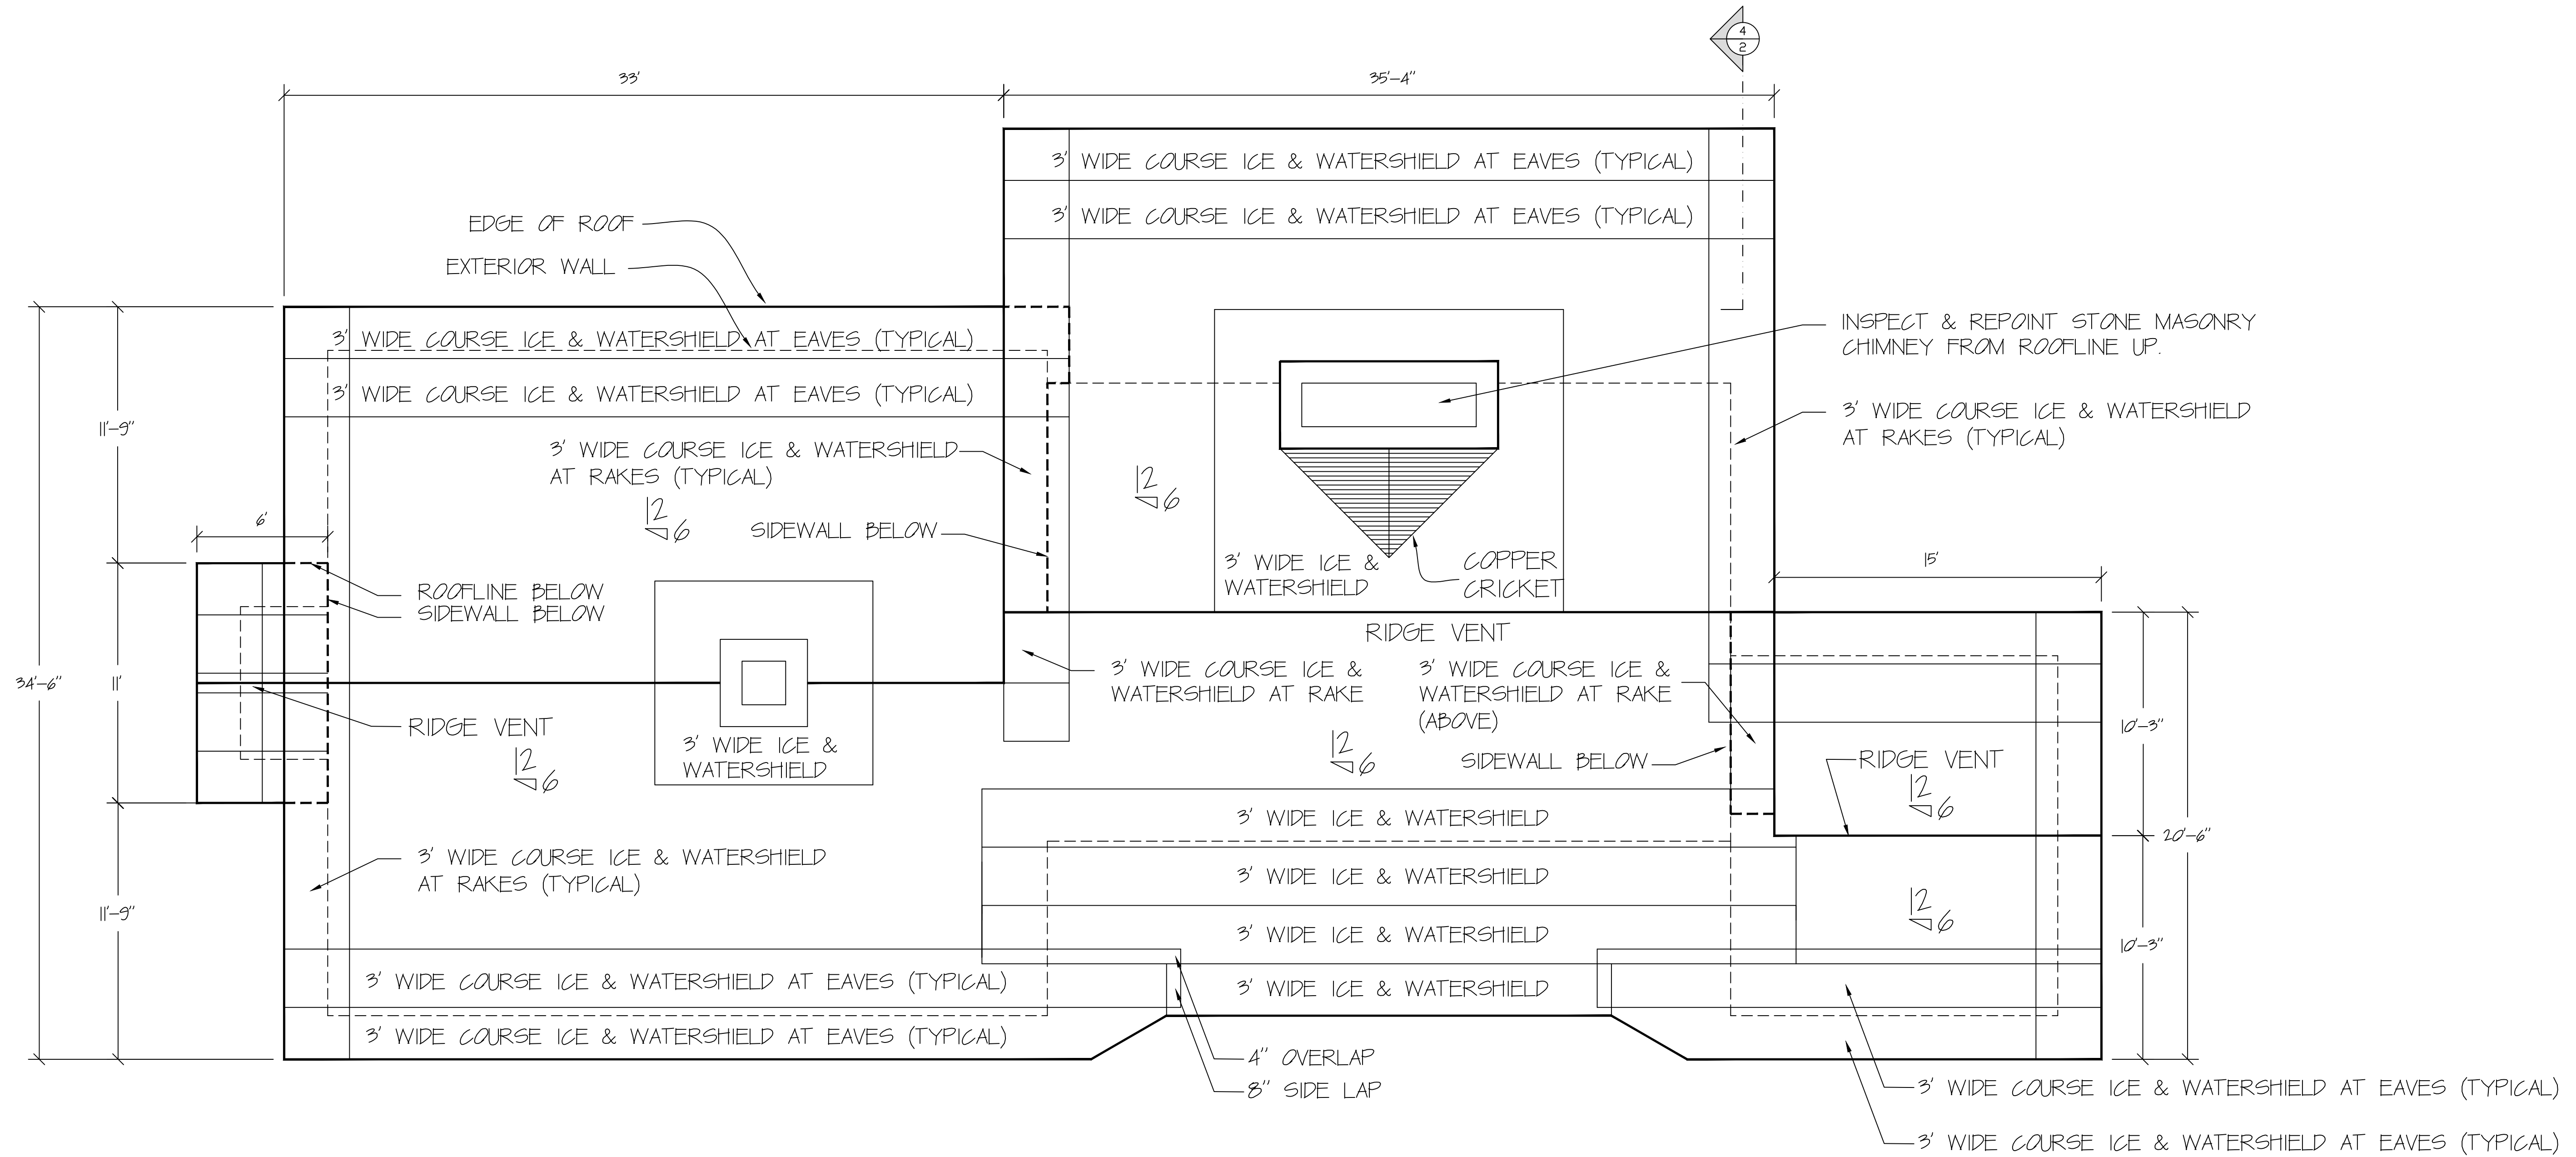

1 MOOSE BROOK ADMINISTRATION BUILDING ROOFING PLAN
1/4" = 1'-0"

PROJECT #	CAP-2204	DATE	AUG 11, 2012
APPROVED BY:		SCALE	1/4"=1'-0"
DRAWN BY:	EDWARD MUSSEY		

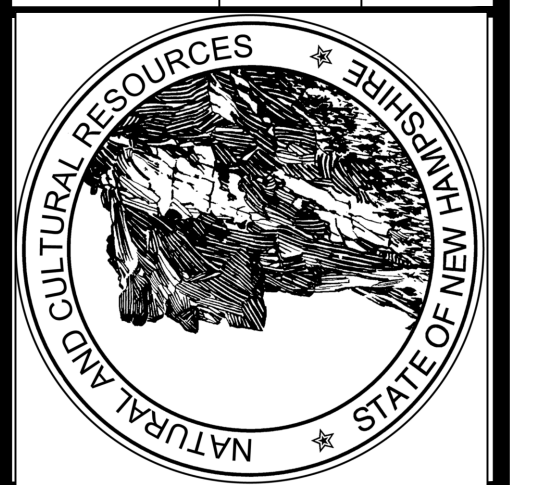

STATE OF NEW HAMPSHIRE
DEPARTMENT OF NATURAL AND CULTURAL RESOURCES
DESIGN DEVELOPMENT & MAINTENANCE SECTION
MOOSE BROOK STATE PARK
GORHAM, NEW HAMPSHIRE